



ENGLISH

WAFFLE MAKER VT-7150 W

The waffle maker is intended for making waffles.

Description

1. Power indicator
2. Ready-to-cook indicator
3. Handles
4. Handle clip
5. Upper form
6. Lower form

ATTENTION!

For additional protection it is reasonable to install a residual current device (RCD) with nominal operating current not exceeding 30 mA. To install an RCD, contact a specialist.

SAFETY MEASURES

Before using the electrical unit, read this instruction manual carefully and keep it for future reference.

Use the unit for its intended purpose only, as specified in this manual. Mishandling the unit can lead to its breakage and cause harm to the user or damage to his/her property.

• Before switching the unit on, make sure that the mains voltage corresponds to the voltage specified on the unit body.

• The power cord is equipped with a europlug; plug it into the socket with a reliable grounding contact.

• To avoid risk of fire, do not use adapters for plugging the unit in.

• To avoid mains overloading, do not switch on several electrical appliances with high power consumption at a time.

• Place the unit on a flat, stable heat-resistant surface with free access to the mains socket.

• Use the unit in places with proper ventilation. To avoid fire, do not place the unit near curtains or blinds and do not cover it during operation.

• Do not use the unit outdoors.

• It is forbidden to use the unit in rooms where inflammable substances are stored or used.

• Do not use the unit near gas-stoves or heaters; do not place the unit on hot surfaces.

• Do not let the power cord hang from the edge of a table, or touch sharp edges or hot surfaces.

• Do not twist the power cord and do not wind it up round the unit body. A special cord storage is on the bottom of the unit body.

• When unplugging the unit, pull the plug but not the cord.

• Do not touch the power plug with wet hands.

• Do not use the unit next to the kitchen sink, do not expose it to moisture.

• To avoid electric shock do not immerse the power cord, the power plug or the unit itself in water or any other liquids. If it has happened, DO NOT TOUCH the unit, unplug it immediately and only then take it out of the water. Apply to the authorized service center for testing and repairing the unit.

• Check the power cord, the power plug and the unit body integrity periodically.

• Never use the unit if the power cord or the power plug is damaged, if the unit works improperly or after it was dropped.

• Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, unplug the unit and apply to any authorized service center from the contact address list given in the warranty certificate and on the website www.vitek.ru.

• Be careful: the unit body heats up strongly during operation, do not touch its hot surfaces.

• Do not move the unit until it cools down completely.

• Never leave the operating unit unattended.

• Always unplug the unit if you are not using it or before cleaning. Before cleaning the unit let it cool down completely.

• **ATTENTION!** Take the waffles out of the unit right after cooking. Keeping waffles in the operating unit for a long time can burn them.

• Never use sharp objects to take waffles out of the waffle maker, it can damage the non-stick coating.

• Never use abrasives or metal sponges for cleaning, as they can damage the non-stick coating or outer surface of the unit.

• Beware of steam output from gaps between the operating forms, be careful, do not touch and do not place open parts of your body near the edges of the operating forms to avoid burns.

• Do not allow children to touch the unit body and the power cord during unit operation.

• Do not leave children unattended to prevent using the unit as a toy.

• For children safety reasons do not leave polyethylene bags, used as packaging, unattended.

• **Attention!** Do not allow children to play with polyethylene bags or packaging film. **Danger of suffocation!**

• Transport the unit in the original package only.

• Keep the unit out of reach of children and disabled persons.

• This unit is not intended for usage by children. Place the unit out of reach of children during operation and cooling down.

• The unit is not intended for usage by physically or mentally disabled persons (including children) or by persons lacking experience or knowledge if they are not under supervision of a person who is responsible for their safety or if they are not instructed by this person on the usage of the unit.

• This unit is not intended for usage by children. Place the unit out of reach of children during operation and cooling down.

• The unit is not intended for usage by physically or mentally disabled persons (including children) or by persons lacking experience or knowledge if they are not under supervision of a person who is responsible for their safety or if they are not instructed by this person on the usage of the unit.

• This unit is not intended for usage by children. Place the unit out of reach of children during operation and cooling down.

• The unit is not intended for usage by physically or mentally disabled persons (including children) or by persons lacking experience or knowledge if they are not under supervision of a person who is responsible for their safety or if they are not instructed by this person on the usage of the unit.

• This unit is not intended for usage by children. Place the unit out of reach of children during operation and cooling down.

• The unit is not intended for usage by physically or mentally disabled persons (including children) or by persons lacking experience or knowledge if they are not under supervision of a person who is responsible for their safety or if they are not instructed by this person on the usage of the unit.

• This unit is not intended for usage by children. Place the unit out of reach of children during operation and cooling down.

• The unit is not intended for usage by physically or mentally disabled persons (including children) or by persons lacking experience or knowledge if they are not under supervision of a person who is responsible for their safety or if they are not instructed by this person on the usage of the unit.

• This unit is not intended for usage by children. Place the unit out of reach of children during operation and cooling down.

• The unit is not intended for usage by physically or mentally disabled persons (including children) or by persons lacking experience or knowledge if they are not under supervision of a person who is responsible for their safety or if they are not instructed by this person on the usage of the unit.

• This unit is not intended for usage by children. Place the unit out of reach of children during operation and cooling down.

• The unit is not intended for usage by physically or mentally disabled persons (including children) or by persons lacking experience or knowledge if they are not under supervision of a person who is responsible for their safety or if they are not instructed by this person on the usage of the unit.

• This unit is not intended for usage by children. Place the unit out of reach of children during operation and cooling down.

• The unit is not intended for usage by physically or mentally disabled persons (including children) or by persons lacking experience or knowledge if they are not under supervision of a person who is responsible for their safety or if they are not instructed by this person on the usage of the unit.

• This unit is not intended for usage by children. Place the unit out of reach of children during operation and cooling down.

• The unit is not intended for usage by physically or mentally disabled persons (including children) or by persons lacking experience or knowledge if they are not under supervision of a person who is responsible for their safety or if they are not instructed by this person on the usage of the unit.

• This unit is not intended for usage by children. Place the unit out of reach of children during operation and cooling down.

• The unit is not intended for usage by physically or mentally disabled persons (including children) or by persons lacking experience or knowledge if they are not under supervision of a person who is responsible for their safety or if they are not instructed by this person on the usage of the unit.

• This unit is not intended for usage by children. Place the unit out of reach of children during operation and cooling down.

DEUTSCH

WAFFELEISEN VT-7150 W

Das Waffeleisen ist für die Zubereitung von Waffeln bestimmt.

Beschreibung

1. Betriebskontrollleuchte
2. Betriebsbereitschaftsleuchte
3. Griffe
4. Griffsperrle
5. Obere Form
6. Untere Form

WAFFLE MAKER USAGE

• Oil the operating form (5, 6) non-stick coating slightly.

• Press the handles (3) together and close the clip (4).

• Insert the power plug into the mains socket, the power indicator (1) will light up, the operating forms (5, 6) will start heating up.

• Once the preset temperature is reached, the ready indicator (2) will light up.

• Pull the clip (4) and lift the upper form (5) holding the handle (3).

• Carefully pour the required amount of the preliminarily made liquid dough into the cavities of the lower form (6).

• Close the forms (5, 6), fix them with the clip (4).

• **Attention!** Excess dough amount can prevent pressing the upper (5) and the lower (6) forms together, in this case it is necessary to remove the surplus dough and close the forms (5, 6).

• Beware of steam output from gaps between the operating forms, be careful, keep your hands and open parts of your body away from edges of the operating forms to avoid burns.

• Approximately in 1-2 minutes check the readiness of waffles by lifting the upper form (5), holding the handle (3). If the waffles are not ready yet, close the waffle maker and wait for a while.

• When the dough gets gold color remove the ready waffles carefully using a plastic or a wooden spatula.

• **ATTENTION!** Take the waffles out of the unit right after you made them. Keeping waffles in the operating unit for a long time can burn them.

• **Note:** Cooking time can change depending on the ingredients used.

• Do not use sharp or metal objects (knives, metal spatulas etc.) to remove waffles from the forms, as this can damage the non-stick coating of the forms (5, 6).

• When you stop baking waffles, switch the unit off, removing the plug from the socket. Leave the unit opened and let it cool down.

• **CLEANING AND CARE**

– Switch the waffle maker off by taking the power cord plug from the socket.

– Let the unit cool down completely, it is recommended to open the upper form (5) for this.

– Remove the remaining dough, clean the non-stick coating with a damp cloth, using a soft detergent, if necessary, and then wipe it dry.

– Never use abrasives or metal sponges for cleaning, as they can damage the inner non-stick coating or outer surface of the unit.

– Never immerse the unit into water!

– Use a soft brush to remove the remaining dough.

• **Attention!** To avoid electric shock, do not immerse the unit into water or any other liquids.

• **STORAGE**

– Clean the unit before taking it away for storage.

– Wind the power cord.

– Keep the unit away from children in a dry cool place.

• **DELIVERY SET**

Waffle maker – 1 pc.
Instruction manual – 1 pc.

• **TECHNICAL SPECIFICATIONS**

Power supply: 220-240 V ~ 50 Hz

Power consumption: 750 W

The manufacturer preserves the right to change the specifications of the unit without a preliminary notification.

• **Unit operating life is 3 years**

• **Guarantee**

Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

• **CE** This product conforms to the EMC-Requirements as laid down by the Council Directive 2004/108/EC and to the Low Voltage Regulation (2006/95/EC)

• **ATTENTION!** Wipe excess oil with a paper cloth, close the unit, insert the plug into the mains socket for 5-10 minutes and then unplug the unit.

• Wait until the operating forms (5, 6) cool off completely and remove the remains of vegetable oil.

• **Note:** When using the unit for the first time, the heating elements' surface is burnt, which may produce a foreign smell. It is normal.

• **WAFFLE MAKER USAGE**

• Oil the operating form (5, 6) non-stick coating slightly.

• Press the handles (3) together and close the clip (4).

• Insert the power plug into the mains socket, the power indicator (1) will light up, the operating forms (5, 6) will start heating up.

• Once the preset temperature is reached, the ready indicator (2) will light up.

• Pull the clip (4) and lift the upper form (5) holding the handle (3).

• Carefully pour the required amount of the preliminarily made liquid dough into the cavities of the lower form (6).

• Close the forms (5, 6), fix them with the clip (4).

• **Attention!** Excess dough amount can prevent pressing the upper (5) and the lower (6) forms together, in this case it is necessary to remove the surplus dough and close the forms (5, 6).

• Beware of steam output from gaps between the operating forms, be careful, keep your hands and open parts of your body away from edges of the operating forms to avoid burns.

• Approximately in 1-2 minutes check the readiness of waffles by lifting the upper form (5), holding the handle (3). If the waffles are not ready yet, close the waffle maker and wait for a while.

• When the dough gets gold color remove the ready waffles carefully using a plastic or a wooden spatula.

• **ATTENTION!** Take the waffles out of the unit right after you made them. Keeping waffles in the operating unit for a long time can burn them.

• **Note:** Cooking time can change depending on the ingredients used.

• Do not use sharp or metal objects (knives, metal spatulas etc.) to remove waffles from the forms, as this can damage the non-stick coating of the forms (5, 6).

• When you stop baking waffles, switch the unit off, removing the plug from the socket. Leave the unit opened and let it cool down.

• **CLEANING AND CARE**

– Switch the waffle maker off by taking the power cord plug from the socket.

– Let the unit cool down completely, it is recommended to open the upper form (5) for this.

– Remove the remaining dough, clean the non-stick coating with a damp cloth, using a soft detergent, if necessary, and then wipe it dry.

– Never use abrasives or metal sponges for cleaning, as they can damage the inner non-stick coating or outer surface of the unit.

– Never immerse the unit into water!

– Use a soft brush to remove the remaining dough.

• **Attention!** To avoid electric shock, do not immerse the unit into water or any other liquids.

• **STORAGE**

– Clean the unit before taking it away for storage.

– Wind the power cord.

– Keep the unit away from children in a dry cool place.

• **DELIVERY SET**

Waffle maker – 1 pc.
Instruction manual – 1 pc.

• **TECHNICAL SPECIFICATIONS**

Power supply: 220-240 V ~ 50 Hz

Power consumption: 750 W

The manufacturer preserves the right to change the specifications of the unit without a preliminary notification.

• **Unit operating life is 3 years**

• **Guarantee**

Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

• **CE** This product conforms to the EMC-Requirements as laid down by the Council Directive 2004/108/EC and to the Low Voltage Regulation (2006/95/EC)

• **ATTENTION!** Wipe excess oil with a paper cloth, close the unit, insert the plug into the mains socket for 5-10 minutes and then unplug the unit.

• Wait until the operating forms (5, 6) cool off completely and remove the remains of vegetable oil.

• **Note:** When using the unit for the first time, the heating elements' surface is burnt, which may produce a foreign smell. It is normal.

• **WAFFLE MAKER USAGE**

• Oil the operating form (5, 6) non-stick coating slightly.

• Press the handles (3) together and close the clip (4).

• Insert the power plug into the mains socket, the power indicator (1) will light up, the operating forms (5, 6) will start heating up.

• Once the preset temperature is reached, the ready indicator (2) will light up.

• Pull the clip (4) and lift the upper form (5) holding the handle (3).

• Carefully pour the required amount of the preliminarily made liquid dough into the cavities of the lower form (6).

• Close the forms (5, 6), fix them with the clip (4).

• **Attention!** Excess dough amount can prevent pressing the upper (5) and the lower (6) forms together, in this case it is necessary to remove the surplus dough and close the forms (5, 6).

• Beware of steam output from gaps between the operating forms, be careful, keep your hands and open parts of your body away from edges of the operating forms to avoid burns.

• Approximately in 1-2 minutes check the readiness of waffles by lifting the upper form (5), holding the handle (3). If the waffles are not ready yet, close the waffle maker and wait for a while.

• When the dough gets gold color remove the ready waffles carefully using a plastic or a wooden spatula.

• **ATTENTION!** Take the waffles out of the unit right after you made them. Keeping waffles in the operating unit for a long time can burn them.

• **Note:** Cooking time can change depending on the ingredients used.

• Do not use sharp or metal objects (knives, metal spatulas etc.) to remove waffles from the forms, as this can damage the non-stick coating of the forms (5, 6).

• When you stop baking waffles, switch the unit off, removing the plug from the socket. Leave the unit opened and let it cool down.

• **CLEANING AND CARE**

– Switch the waffle maker off by taking the power cord plug from the socket.

– Let the unit cool down completely, it is recommended to open the upper form (5) for this.

– Remove the remaining dough, clean the non-stick coating with a damp cloth, using a soft detergent, if necessary, and then wipe it dry.

– Never use abrasives or metal sponges for cleaning, as they can damage the inner non-stick coating or outer surface of the unit.

– Never immerse the unit into water!

– Use a soft brush to remove the remaining dough.

• **Attention!** To avoid electric shock, do not immerse the unit into water or any other liquids.

• **STORAGE**

– Clean the unit before taking it away for storage.

– Wind the power cord.

– Keep the unit away from children in a dry cool place.

• **DELIVERY SET**

Waffle maker – 1 pc.
Instruction manual – 1 pc.

• **TECHNICAL SPECIFICATIONS**

Power supply: 220-240 V ~ 50 Hz

Power consumption: 750 W

The manufacturer preserves the right to change the specifications of the unit without a preliminary notification.

• **Unit operating life is 3 years**

• **Guarantee**

Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

• **CE** This product conforms to the EMC-Requirements as laid down by the Council Directive 2004/108/EC and to the Low Voltage Regulation (2006/95/EC)

• **ATTENTION!** Wipe excess oil with a paper cloth, close the unit, insert the plug into the mains socket for 5-10 minutes and then unplug the unit.

• Wait until the operating forms (5, 6) cool off completely and remove the remains of vegetable oil.

• **Note:** When using the unit for the first time, the heating elements' surface is burnt, which may produce a foreign smell. It is normal.

• **WAFFLE MAKER USAGE**

• Oil the operating form (5, 6) non-stick coating slightly.

• Press the handles (3) together and close the clip (4).

• Insert the power plug into the mains socket, the power indicator (1) will light up, the operating forms (5, 6) will start heating up.

• Once the preset temperature is reached, the ready indicator (2) will light up.

• Pull the clip (4) and lift the upper form (5) holding the handle (3).

• Carefully pour the required amount of the preliminarily made liquid dough into the cavities of the lower form (6).

• Close the forms (5, 6), fix them with the clip (4).

